

Equipment Instructions

Popcorn Machine Instructions

Instructions for Proper Popcorn Machine Use

*Plug machine DIRECTLY into the wall. DO NOT use an extension cord. If you are using another machine with a heating element, make sure both are plugged into separate outlets/circuits.

*This machine is not to be operated by minors. Minors are classified as anyone under the age of 18.

*Turn the Light and Heat Switches to the on position. Allow the machine 3 to 4 minutes to warm up.

*Turn the Kettle Switch to the on position.

*Add entire contents of oil/butter and kernels/salt which is included in the popcorn kit.

*If you are not using the Popcorn Kits the ration of oil/butter to kernels are as follows

- 6oz popcorn machines use $\frac{1}{4}$ cup of popping oil and $\frac{3}{4}$ cup of popcorn kernels per batch
- 8oz popcorn machines use $\frac{1}{3}$ cup of popping oil and 1 cup of popcorn kernels per batch
- 14oz popcorn machines use $\frac{1}{2}$ cup of popping oil and $1\frac{3}{4}$ cups of popcorn kernels per batch

*When time between popping nears 3 to 5 seconds dump the kettle

*Repeat steps starting with 'Add entire contents of popcorn kit'

** Always pop 3 to 5 batches of popcorn at a time for the best tasting popcorn.

SNOW CONE MACHINE:

Operation instructions

Your ice crusher is used to crush small ice cubes. Clean the interior with lukewarm water and a soft cloth the blade is very SHARP, operate with care. Don't pour water directly in the hopper to clean which will damage the motor. Unplug The ice crusher before cleaning

The use of any appliance must follow basic guidelines, in particular: High humidity environment will increase the risk of short circuit or electric shock. If in doubt, cut off the power of the ice crusher. Please do not directly pull down the power cord to turn off the machine, turn off the machine by the switch. The ice crusher cannot be used by children or disabilities without adult supervision.

- a) The ice crusher is only used to crush ice, can't be used for other purpose.
- b) Operate the machine follow the steps as below.

STEP 1: Put some small ice cubes into hopper

STEP 2: Turn on the machine; press the handle down to crush ice

STEP 3: Turn off the machine; lift handle; open the door to take crushed ice out

**IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed to reduce the risk of fire, electric shock and injury to persons or property.

Read all instructions before operating the machine for the first time. Install the machine correctly before using.

1. Keep the ice crusher and power cable away from heat sources and hot surfaces.
2. To avoid electrical shock, do not place the cord, plug or ice crusher in water or other liquids.
3. We do not recommend the use of an extension cord, as it may overheat and become a

risk of fire.

4. Do not operate appliance with wet hands or operate in a wet working environment. 5. Always protect the power cable from undue flexing and wearing –do not allow the cable to hang off edge of the counter or table.

6. If the supply cord is damaged, do not use the product. Contact customer service for repair or replacement.

7. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

8. Children should be supervised to ensure that they do not play with the appliance.

9. Do not move the ice crusher while it is switched on.

10. Do not leave your Professional Blender unattended when power is connected.

11. Unplug the ice crusher before cleaning or making any repairs or servicing.

NOTE: strongly recommend to repair the machine by professional technician.

12. It's forbidden to pull the cable to unplug the plug, pull the plug is a must.

13. The ice crusher is commercial machine which is intended to be used in staff kitchen areas in shops, offices and other working environments;

14. Warning: Don't use your ice crusher outdoors. Avoid direct sunlight and make sure that there is at least 15cm of space between the back and sides of your unit and the wall.

15. Do not tip the machine over.

16. The blade must be replaced by original blade. Warning: The blade is very sharp, operate with care.